

SCOLA DISH SETUP

C-Band satellite dish



Analog receiver to fine tune dish point



Back panel of a WEGENER IRD




① Mode switch



② Frequency command switch

③ Audio outputs

Mode switch -- Pins two and eight must be down. →

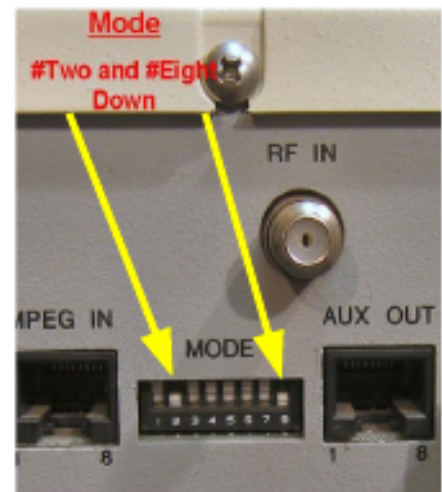

To fine tune your system please see other documentation